



Type	CP712+
------	--------

6 Channels Mode

Channel	Function	Instruction
CH1	Red Dimmer	Dimmer – 1/255
CH2	Green Dimmer	Dimmer – 1/255
CH3	Blue Dimmer	Dimmer - 1/255
CH4	White Dimmer	Dimmer – 1/255
CH5	Amber Dimmer	Dimmer – 1/255
CH6	Ultraviolet Dimmer	Dimmer – 1/255

10 Channels Mode

Channel	Function	Instruction
CH1	Total Dimmer	RGBW Dimmer - 1/255
CH2	Red Dimmer	Red Dimmer – 1/255
CH3	Green Dimmer	Green Dimmer – 1/255
CH4	Blue Dimmer	Blue Dimmer – 1/255
CH5	White Dimmer	White Dimmer – 1/255
CH6	Amber Dimmer	Amber Dimmer – 1/255
CH7	Ultraviolet Dimmer	Ultraviolet Dimmer – 1/255
CH8	Total Strobe	RGBW Total Strobe – 1/255
CH9	Function Choice	000-050 CH1-CH8 Control 051-100 Different Colors Output 101:150 Colors Jump change 151-200 Colors Gradate 201-250 Colors Pulse Change 251-255 Sound active
CH10	Function / Speed	Slow to fast (At the colors output choose the color)



Digital Show Function Form

Shows	Function	Value	Instruction
D001	DMX Adress	001-512	4CH Mode UP/DOWN : INCREASE/REDUCE Value
A001	DMX Adress	001-512	8CH Mode UP/DOWN: INCREASE/REDUCE Value
R255	Red Dim	000-255	UP/DOWN Change Brightness
G255	Green Dim	000-255	UP/DOWN Change Brightness
B255	Blue Dim	000-255	UP/DOWN Change Brightness
U255	White Dim	000-255	UP/DOWN Change Brightness
Y255	Amber Dim	000-255	UP/DOWN Change Brightness
P255	Ultraviolet Dim	000-255	UP/DOWN Change Brightness
FH99	Strobe	01-99	UP/DOWN Change Speed
CL01	Color Choose	01-08	UP/DOWN Change Color
CC99	Colors Jump	01-99	UP/DOWN Change Speed
DE99	Colors Gradate	01-99	UP/DOWN Change Speed
CP99	Colors Pulse	01-99	UP/DOWN Change Speed
SU01	Colors Sound- Active	01-09	UP/DOWN Change the effects