



**Type** CP712

**4 Channels Mode**

Channel	Function	Instruction
CH1	Red Dimmer	Dimmer - 1/255
CH2	Green Dimmer	Dimmer - 1/255
CH3	Blue Dimmer	Dimmer - 1/255
CH4	White Dimmer	Dimmer - 1/255

**8 Channels Mode**

Channel	Function	Instruction
CH1	Total Dimmer	RGBW Dimmer - 1/255
CH2	Red Dimmer	Red Dimmer - 1/255
CH3	Green Dimmer	Green Dimmer - 1/255
CH4	Blue Dimmer	Blue Dimmer - 1/255
CH5	White Dimmer	White Dimmer - 1/255
CH6	Total Strobe	RGBW Total Strobe - 1/255
CH7	Function Choice	0-50 CH1-CH6 Control 51-100 Different Colors output 101-150 Colors Jump Change 151-200 Colors Gradate 201-250 Colors Pulse Change. 251-255 Sound-Active
CH8	Function / Speed	Slow to fast ( At the colors output choose the color )



**Digital Show Function Form**

<b>Shows</b>	<b>Function</b>	<b>Value</b>	<b>Instruction</b>
D001	DMX Adress	001-512	4CH Mode UP/DOWN : INCREASE/REDUCE Value
A001	DMX Adress	001-512	8CH Mode UP/DOWN: INCREASE/REDUCE Value
R255	Red Dim	000-255	UP/DOWN Change Brightness
G255	Green Dim	000-255	UP/DOWN Change Brightness
B255	Blue Dim	000-255	UP/DOWN Change Brightness
U255	White Dim	000-255	UP/DOWN Change Brightness
F255	Strobe	010-255	UP/DOWN Change Speed
CC15	Colors Jump	00-15	UP/DOWN Change Speed
DE15	Colors Gradate	00-15	UP/DOWN Change Speed
CP15	Colors Pulse	00-15	UP/DOWN Change Speed
SoUd	Colors Sound- Active	-	Sound-Active